

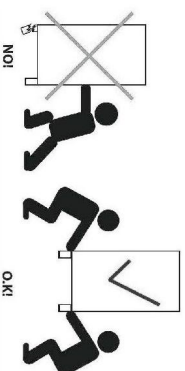
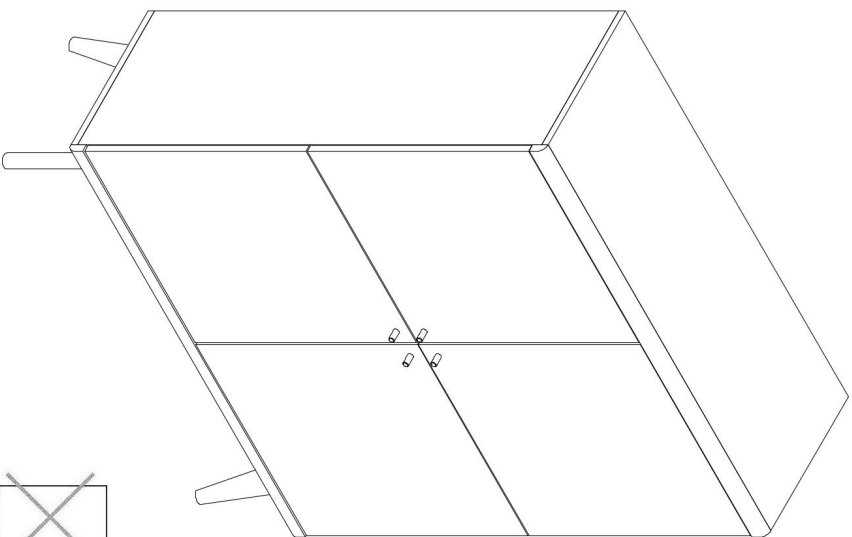


PROMI PK107

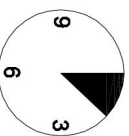
















14.10.2016

- D Montageanleitung
- FR Notice de montage
- NL Handleiding voor de montage
- CZ Montážní návod
- HU Szerelési útmutató
- TR Montaj talimatı
- GB Assembly Instructions
- IT Istruzioni di montaggio
- PL Instrukcja montażu
- SK Návod na montáž
- RO Instrucțiuni de montaj
- RU Инструкции по монтажу


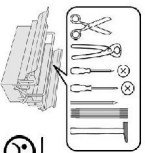


20 min.


1

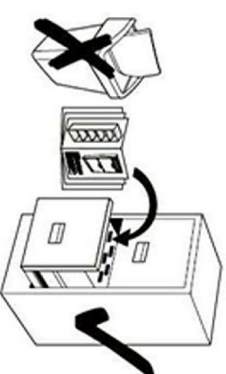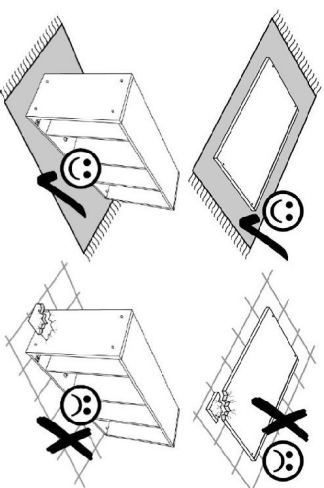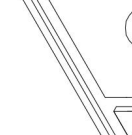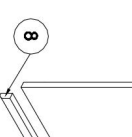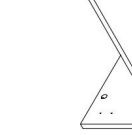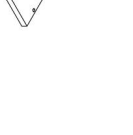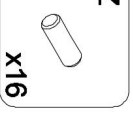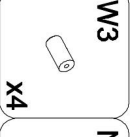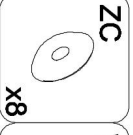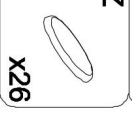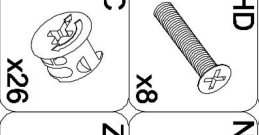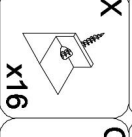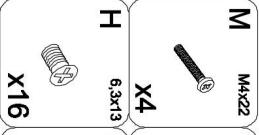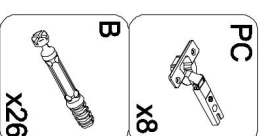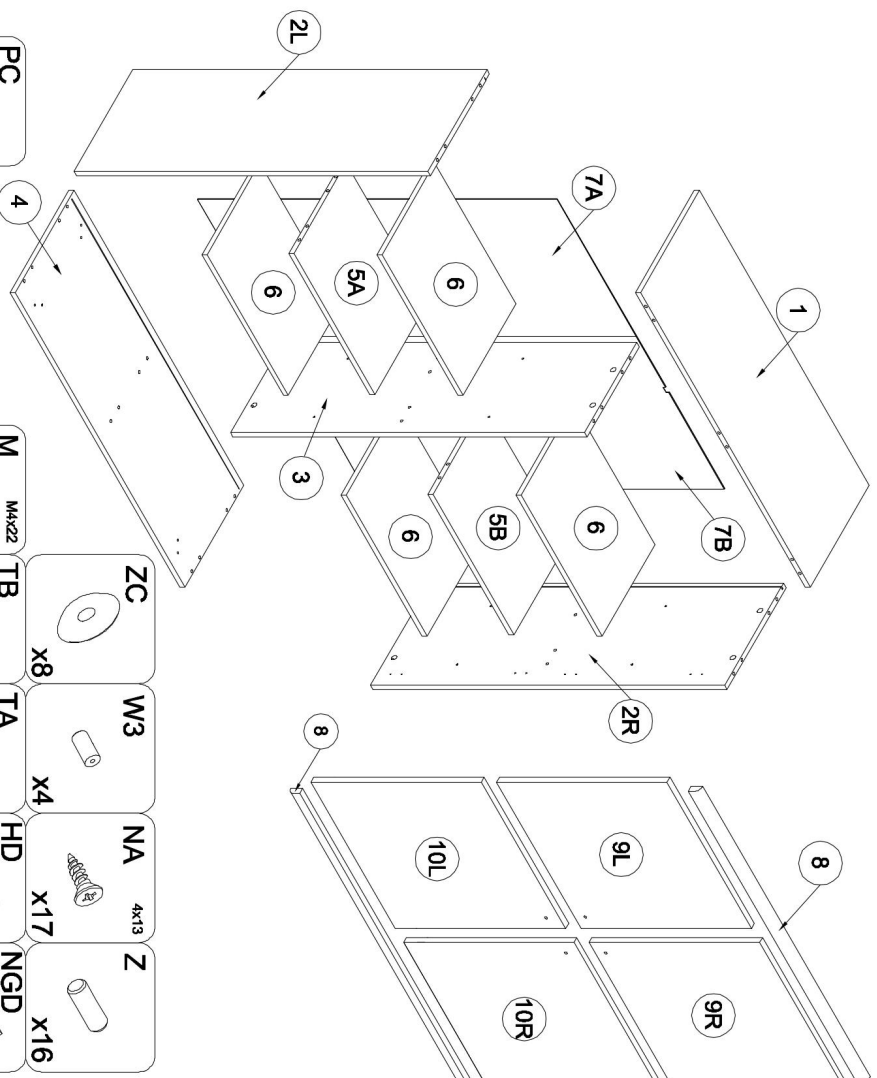


2

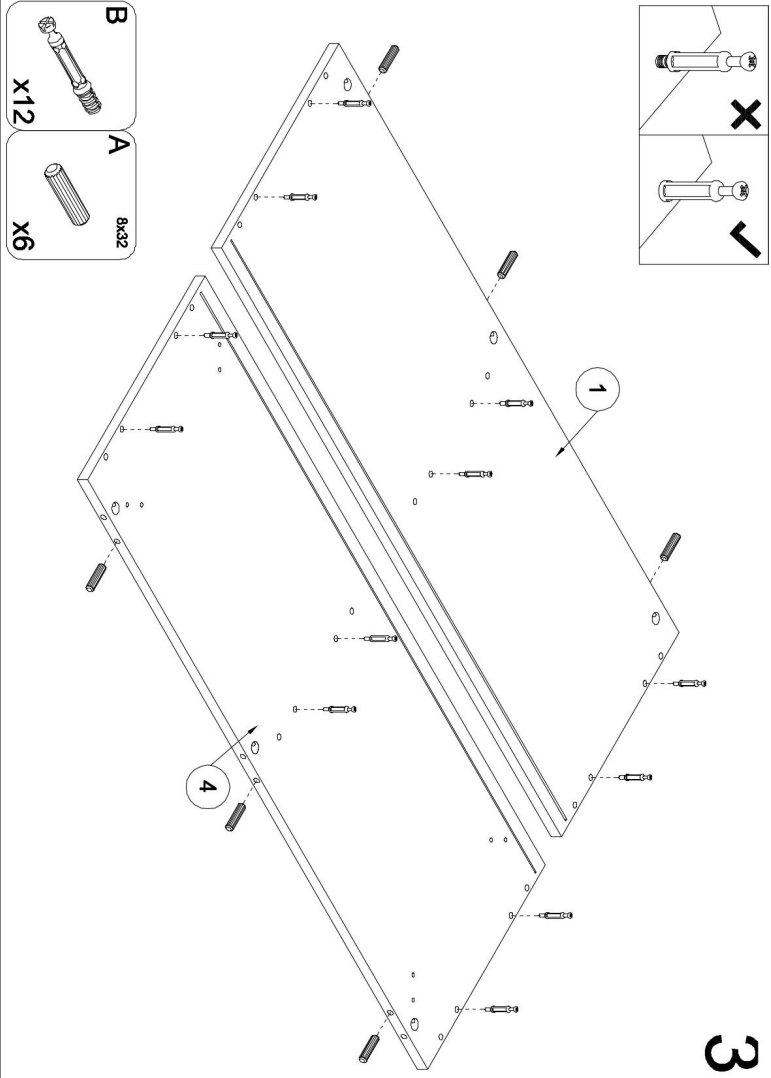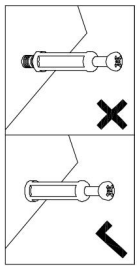


3

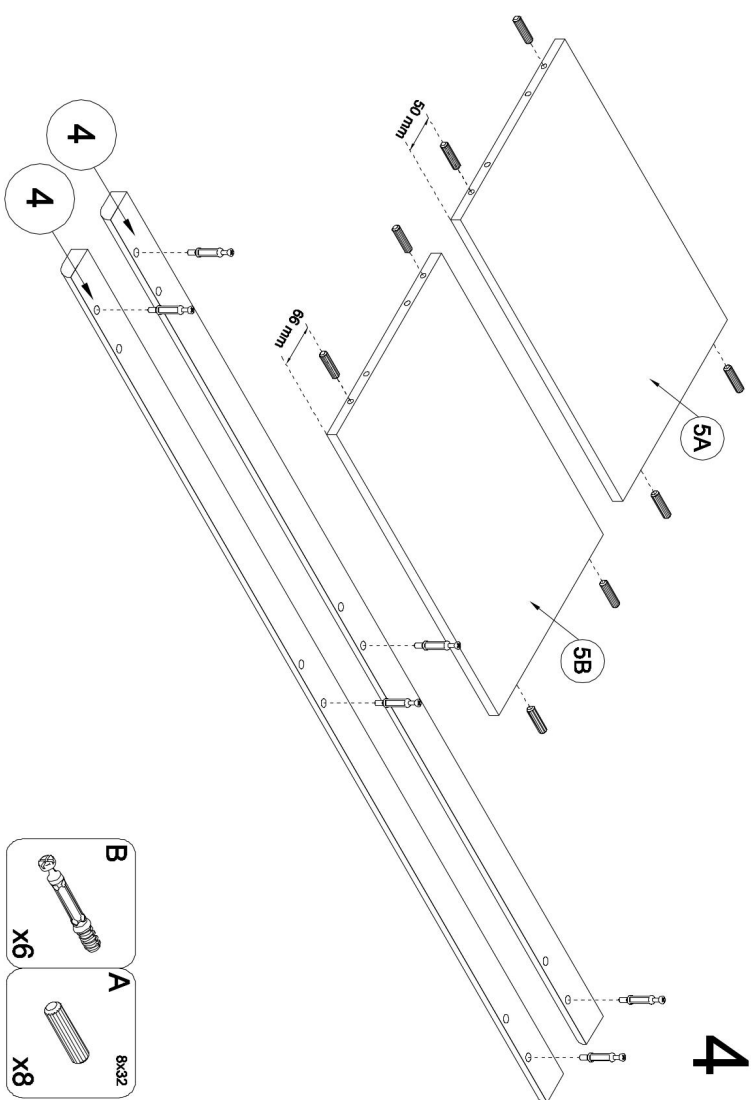

4


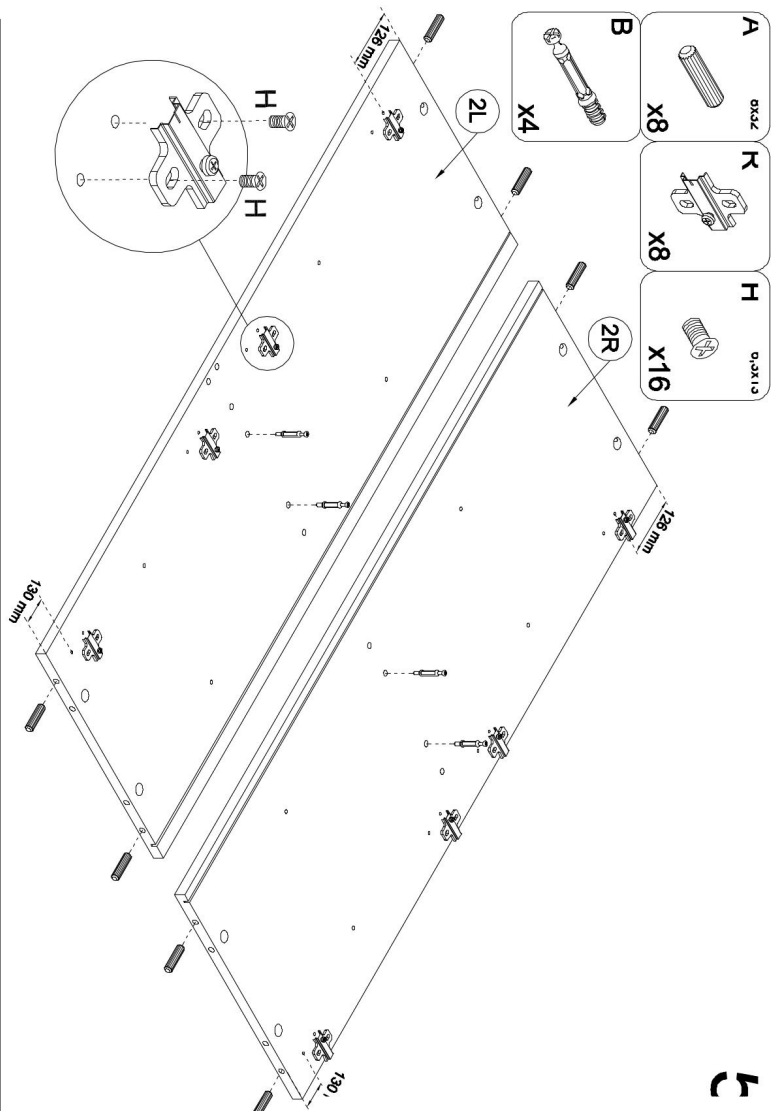


5



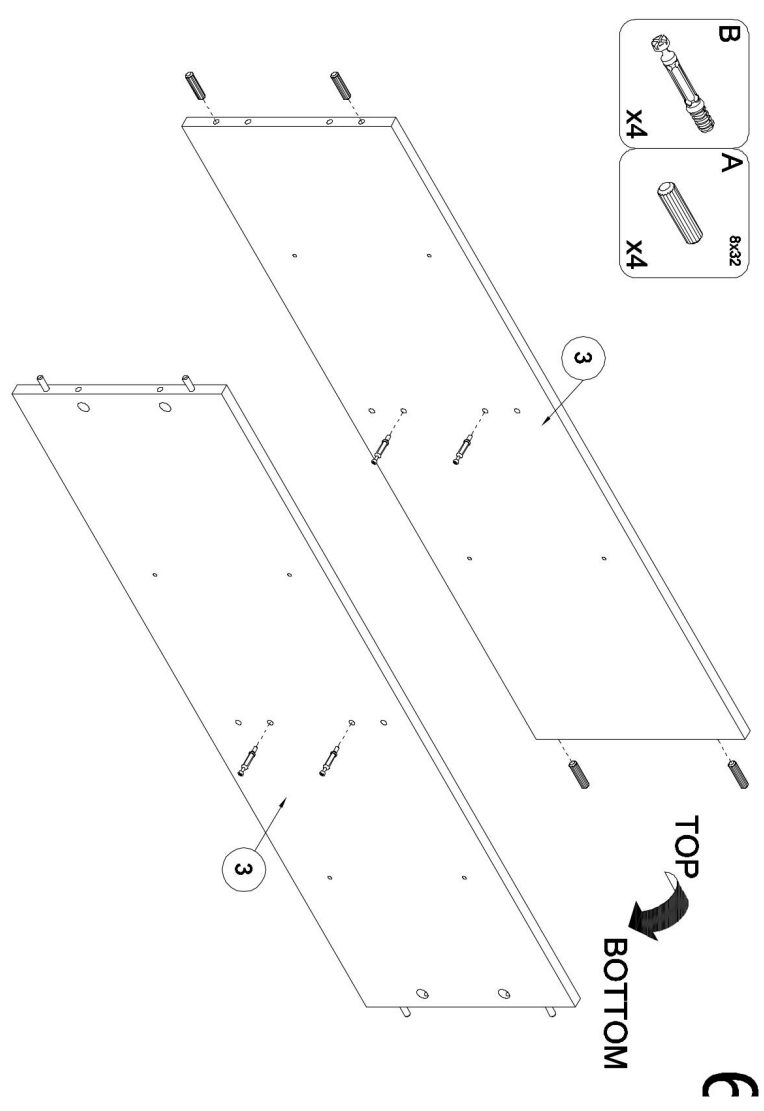


6




TOP
BOTTOM

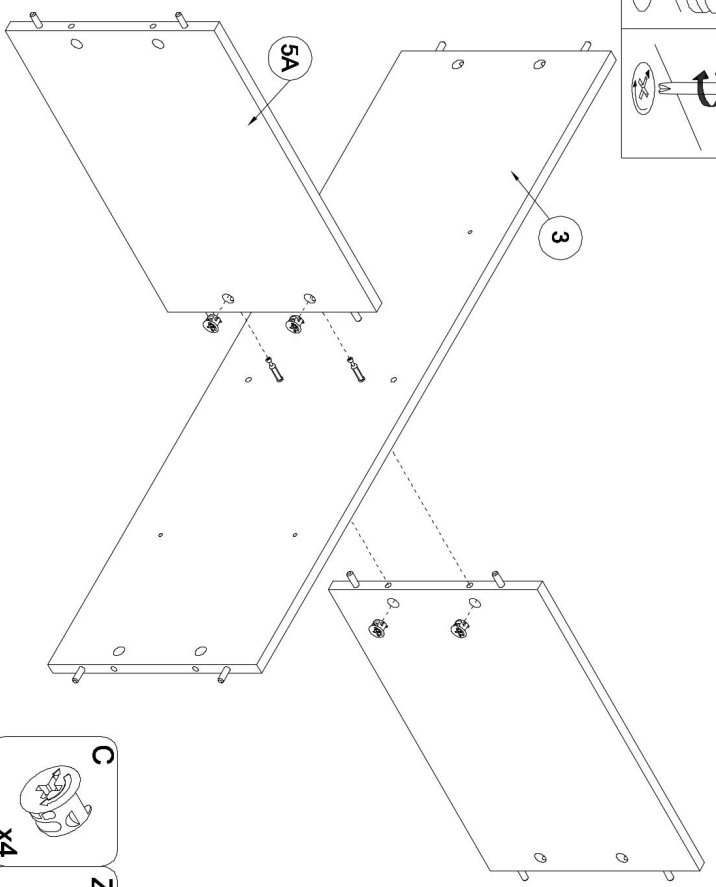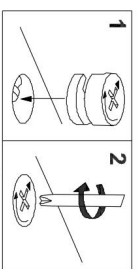




7

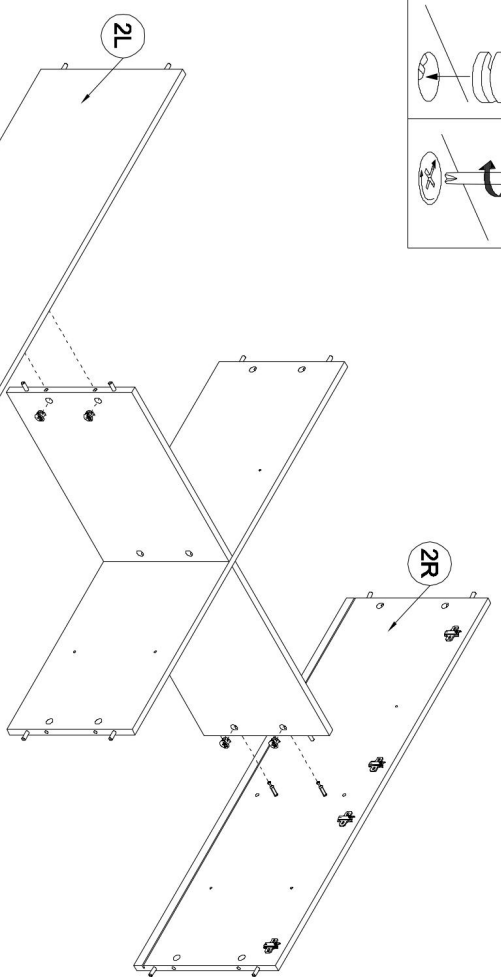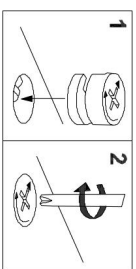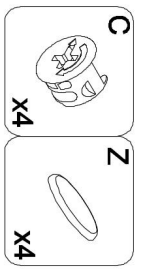


8

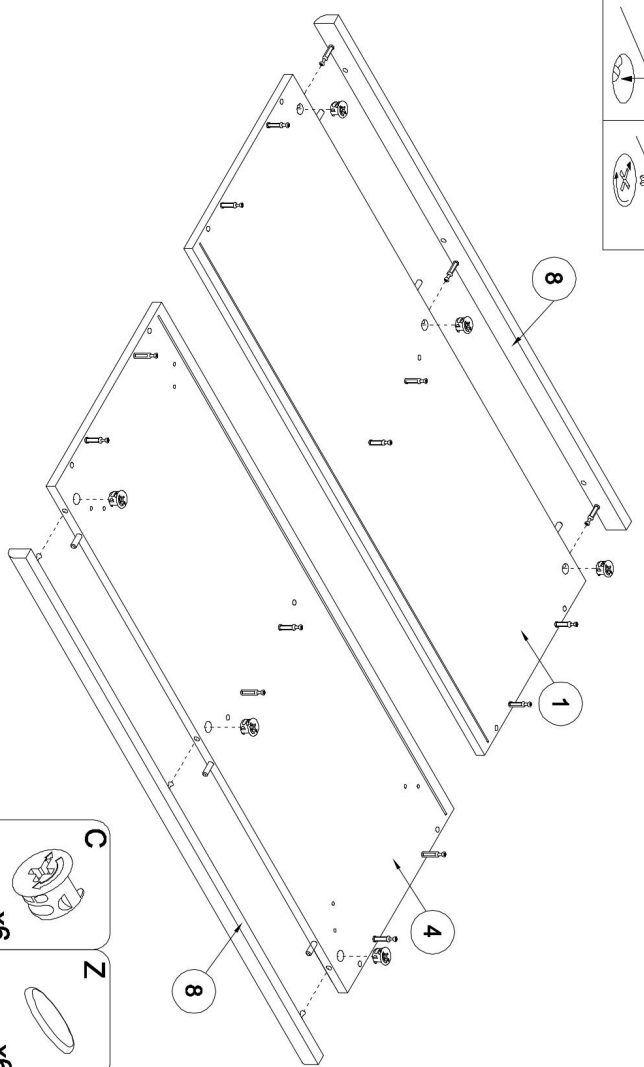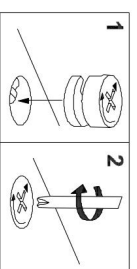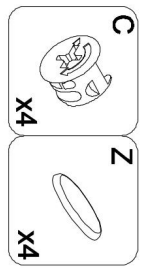


9

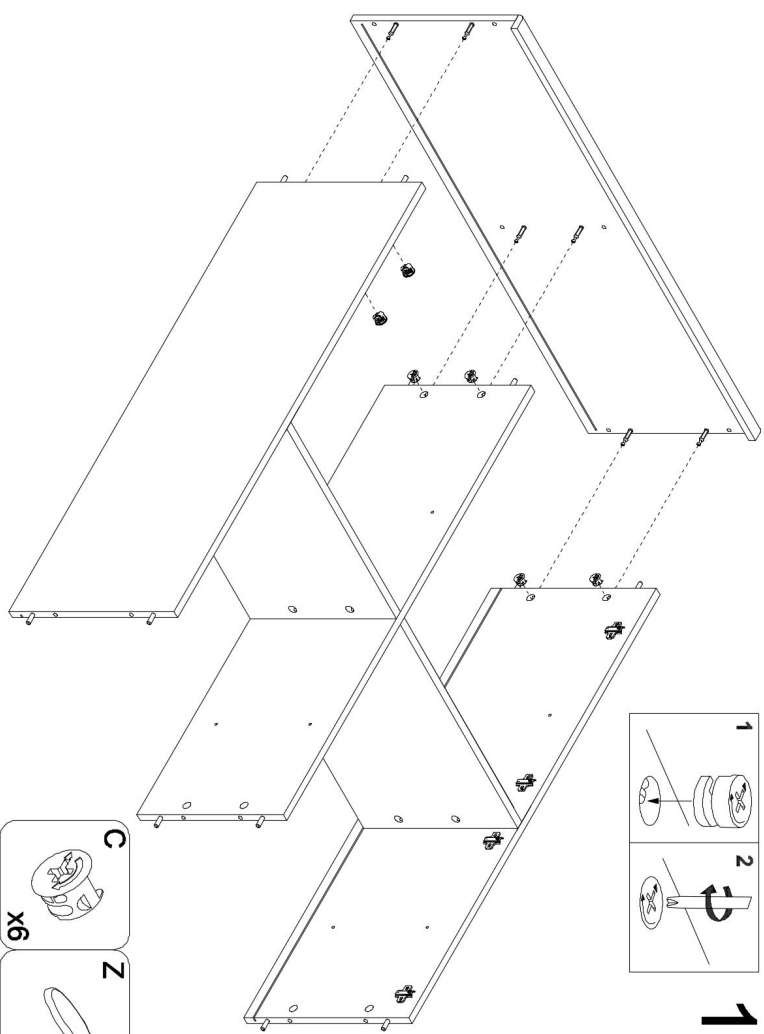
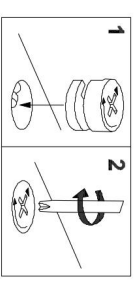
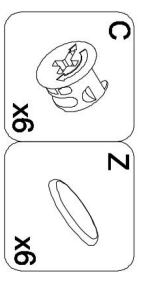


10


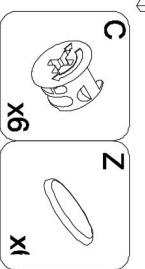


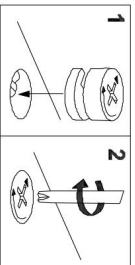




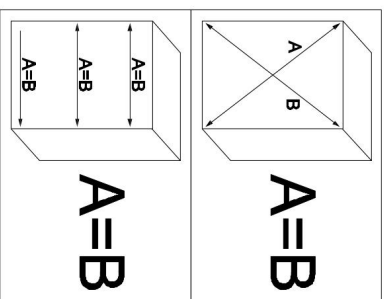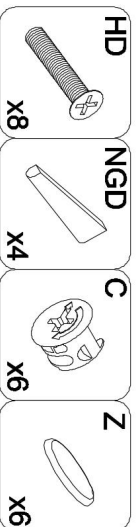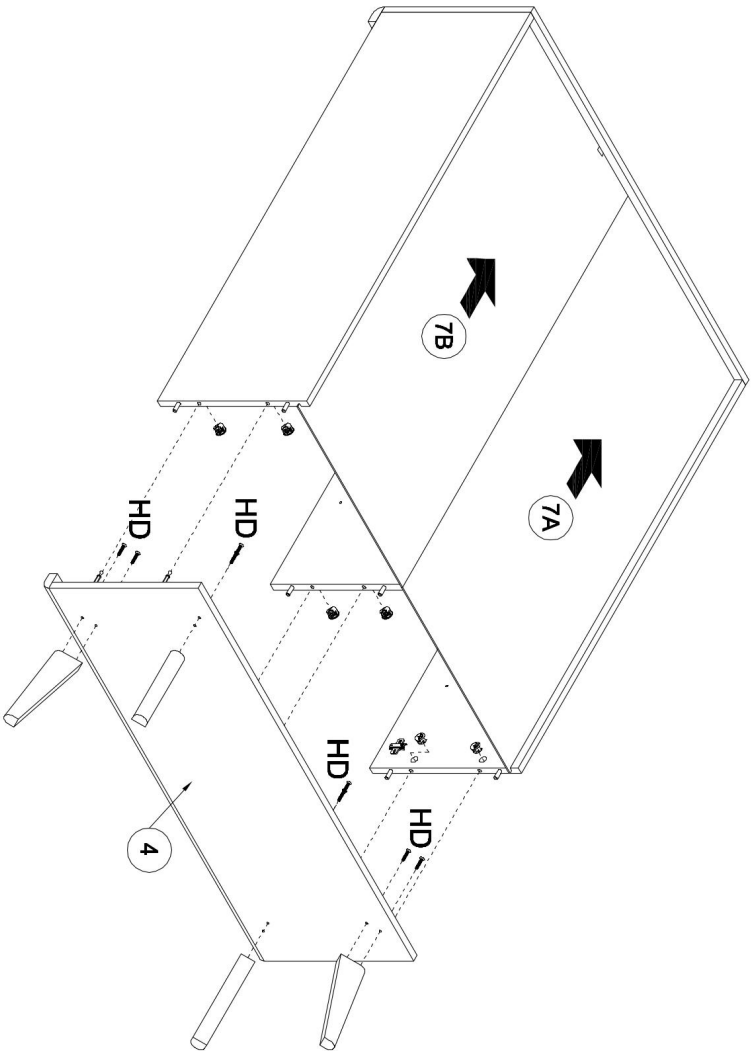


11



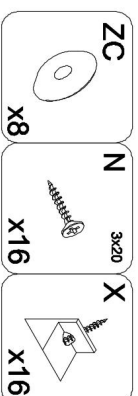
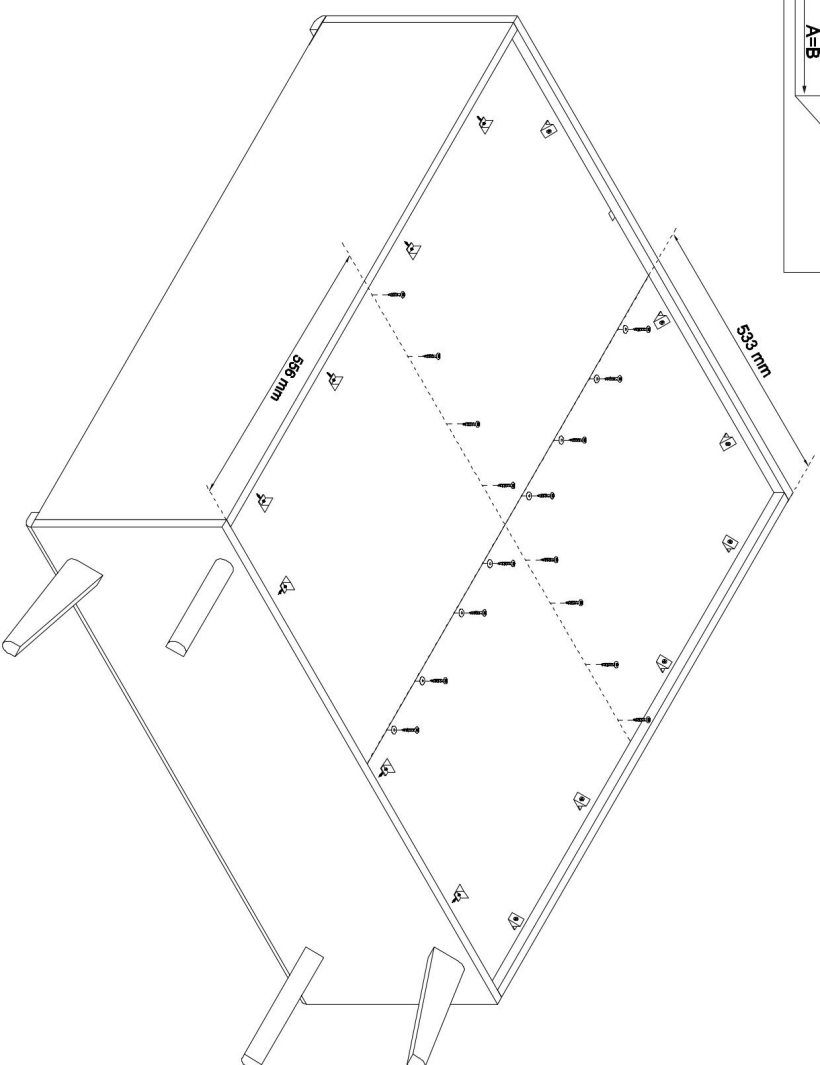


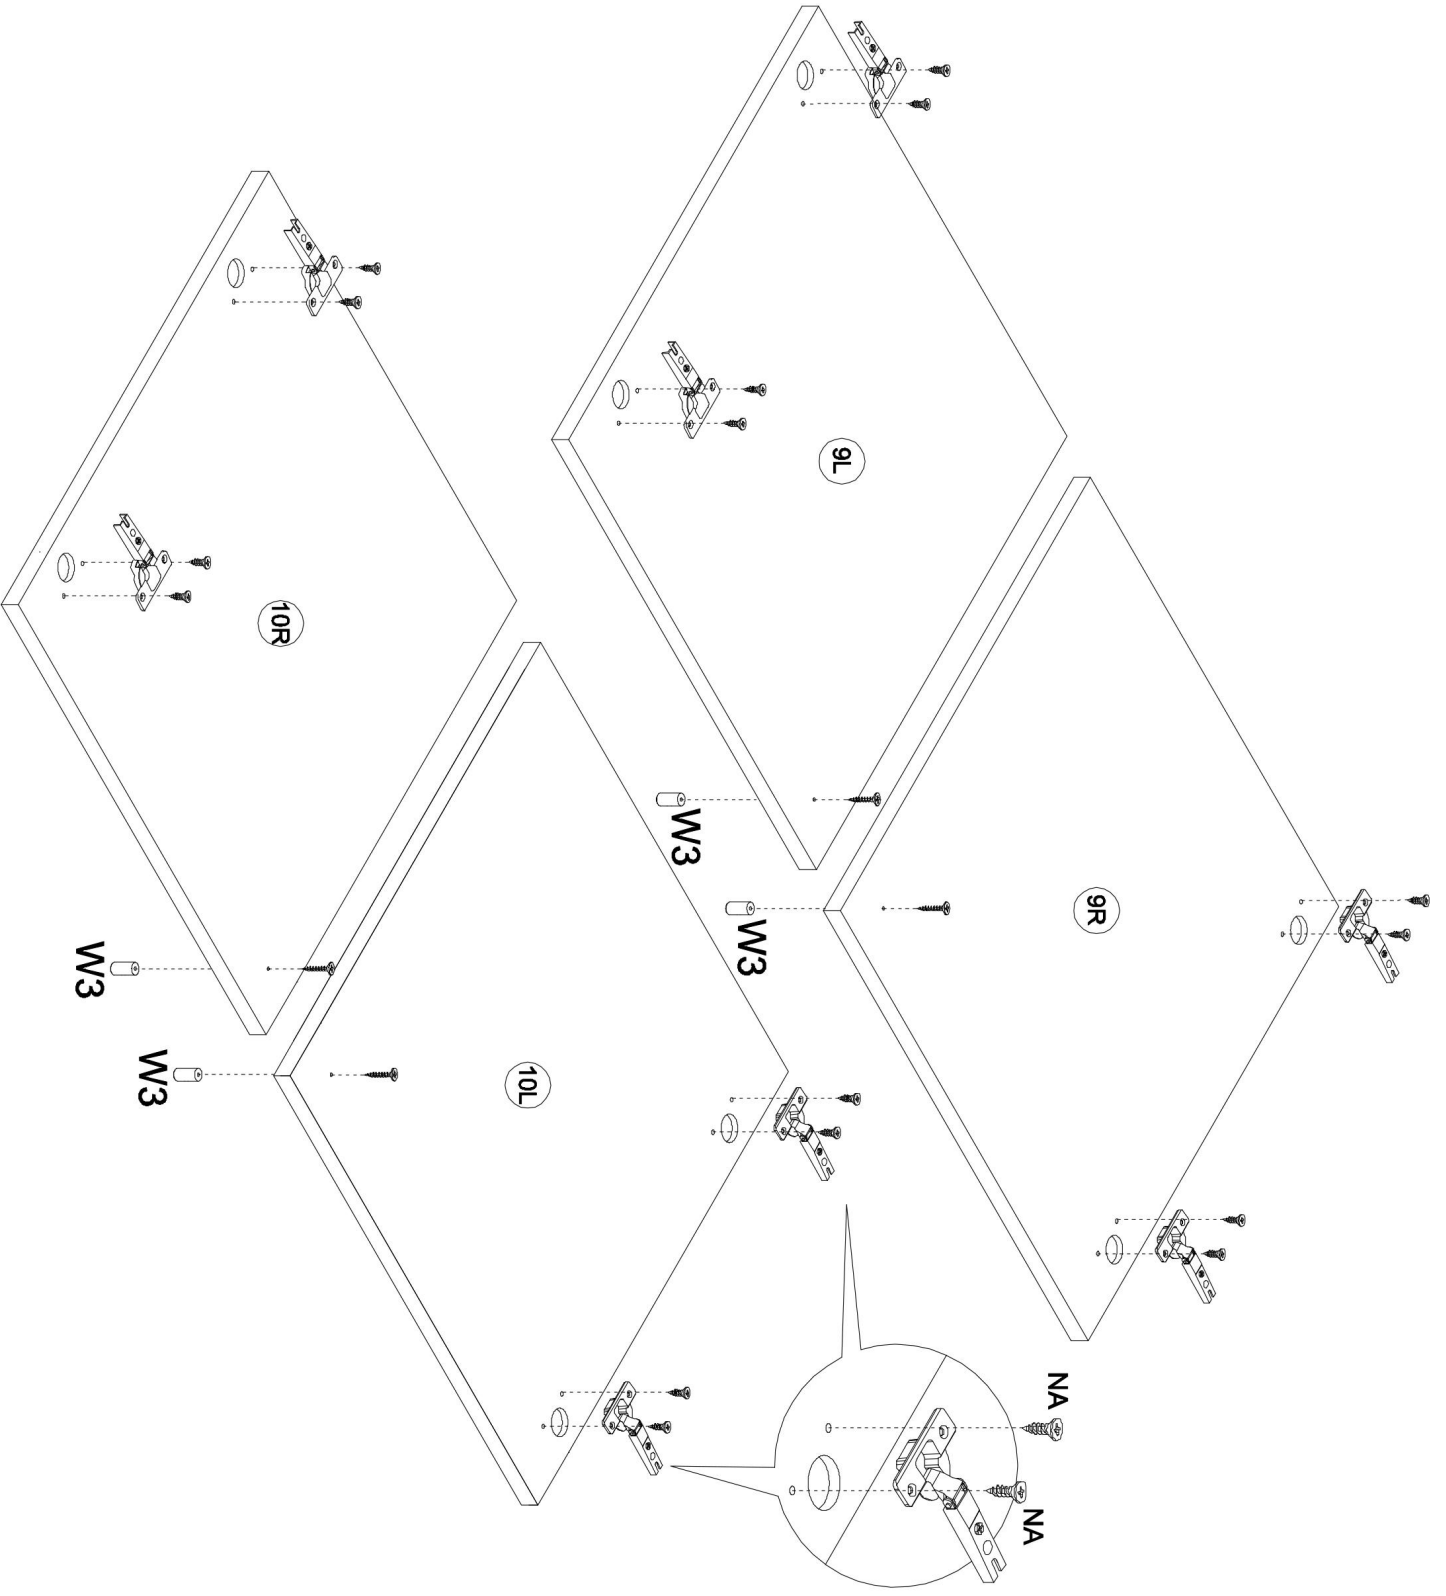



12



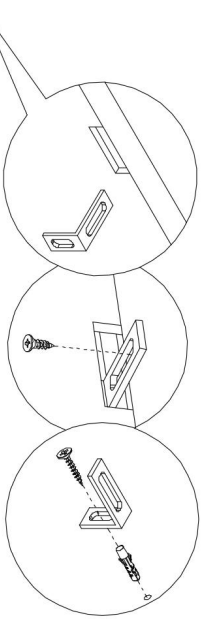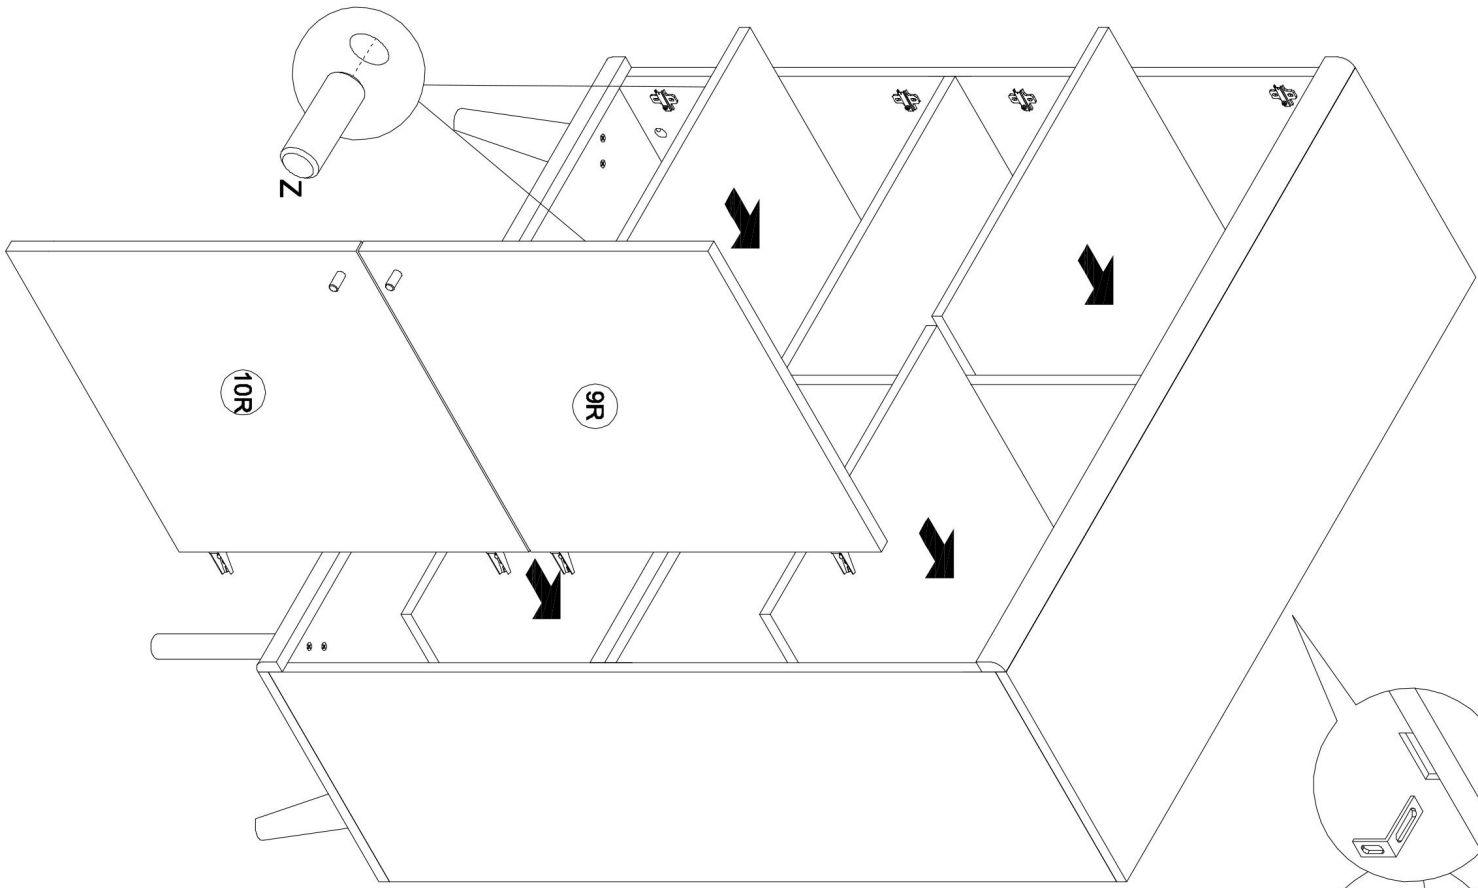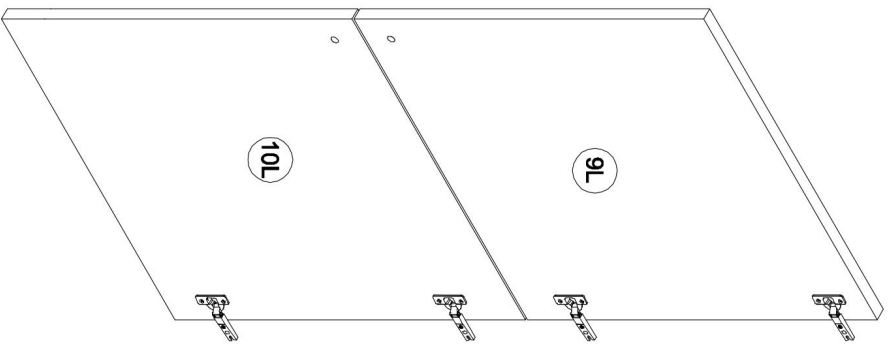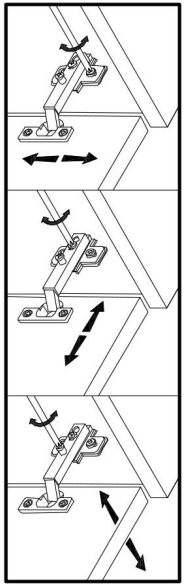

- | | |
|---|-------------------|
|  | W3 |
|  | M
M4x22 |
|  | NA
4x13 |
|  | PC
x16 |
|  | W3
x4 |



- 
TB
- x1
- 
TA
- x1
- 
NA
- 4x13
x1
- 
Z
- x16