
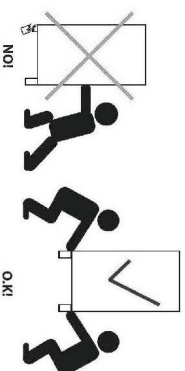




DORIN

NK107

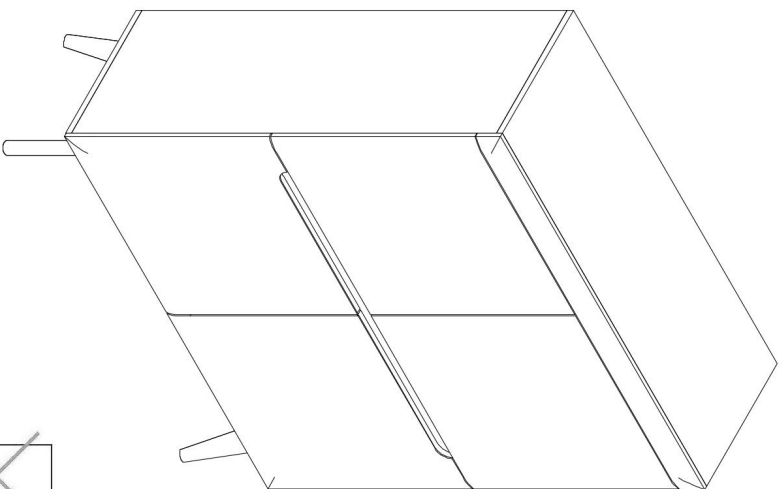


14.10.2016

- D** Montageanleitung
- FR** Notice de montage
- NL** Handleiding voor de montage
- CZ** Montážní návod
- HU** Szerelési útmutató
- TR** Montaj talimatı
- GB** Assembly Instructions
- IT** Istruzioni di montaggio
- PL** Instrukcja montażu
- SK** Návod na montáž
- RO** Instrucțiuni de montaj
- RU** Инструкция по монтажу

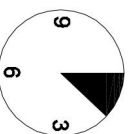
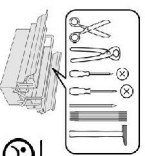


20 min.



1

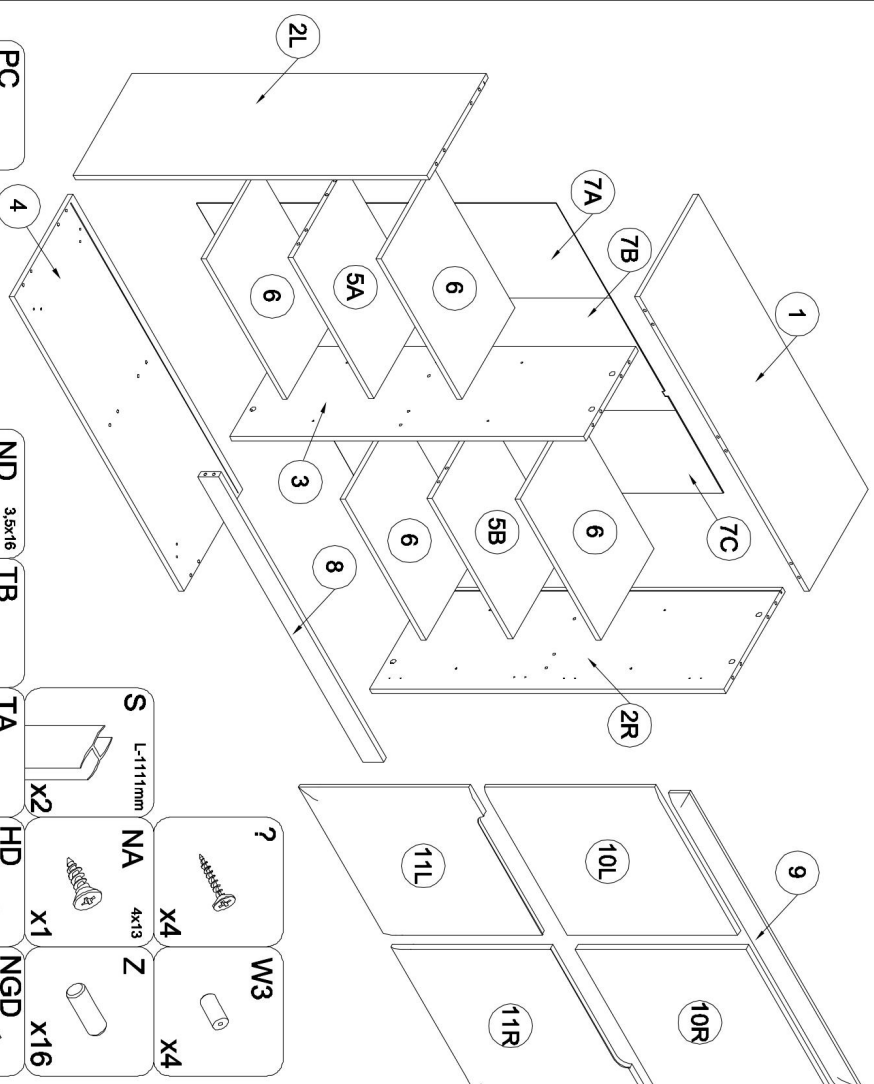


B X23	A 8x32 X27	R X8	H 6,3x13 X16	N 3x20 X16	X X14	C X23	Z X23	PC X8	ND 3,5x16 X16	TB X1	TA X1	HD X8	NGD X4	S L-1111mm X2	NA 4x13 X4	Z X4	W3 X4	? X4
-----------------	-------------------------	----------------	---------------------------	-------------------------	-----------------	-----------------	-----------------	-----------------	----------------------------	-----------------	-----------------	-----------------	------------------	----------------------------	-------------------------	----------------	-----------------	----------------

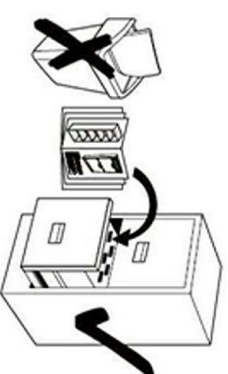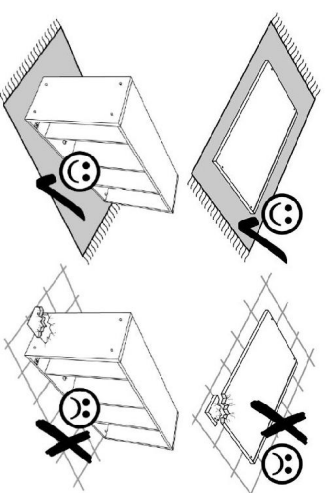

2

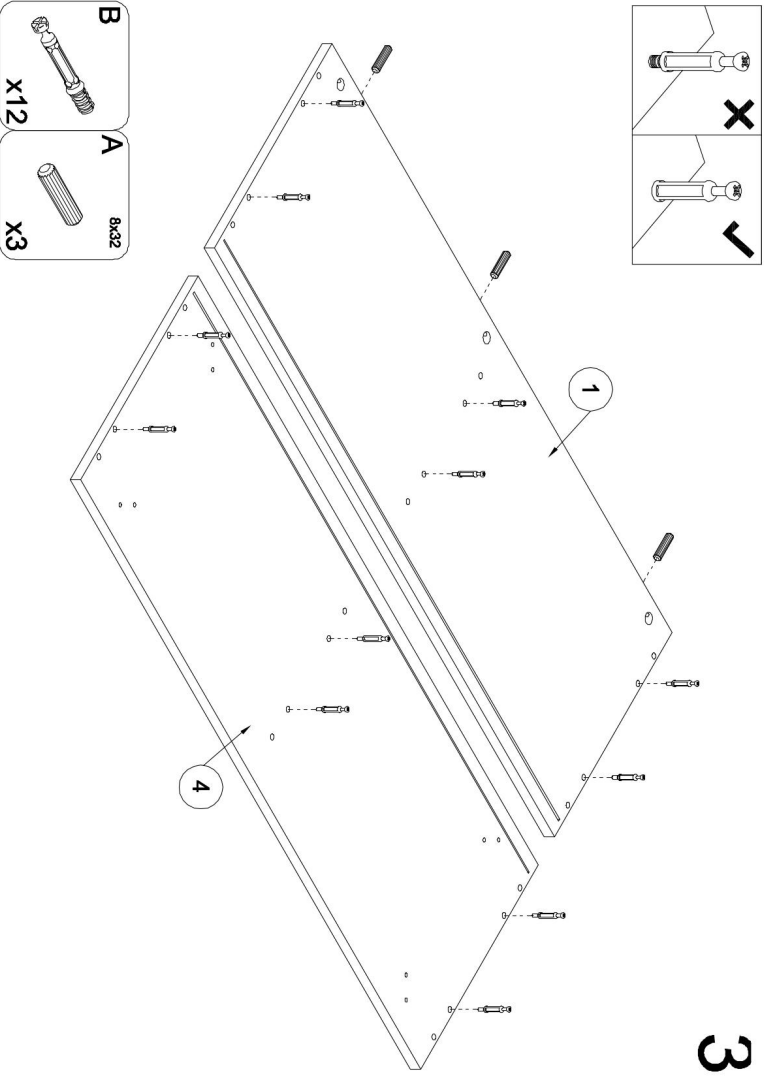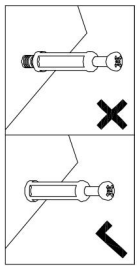



3

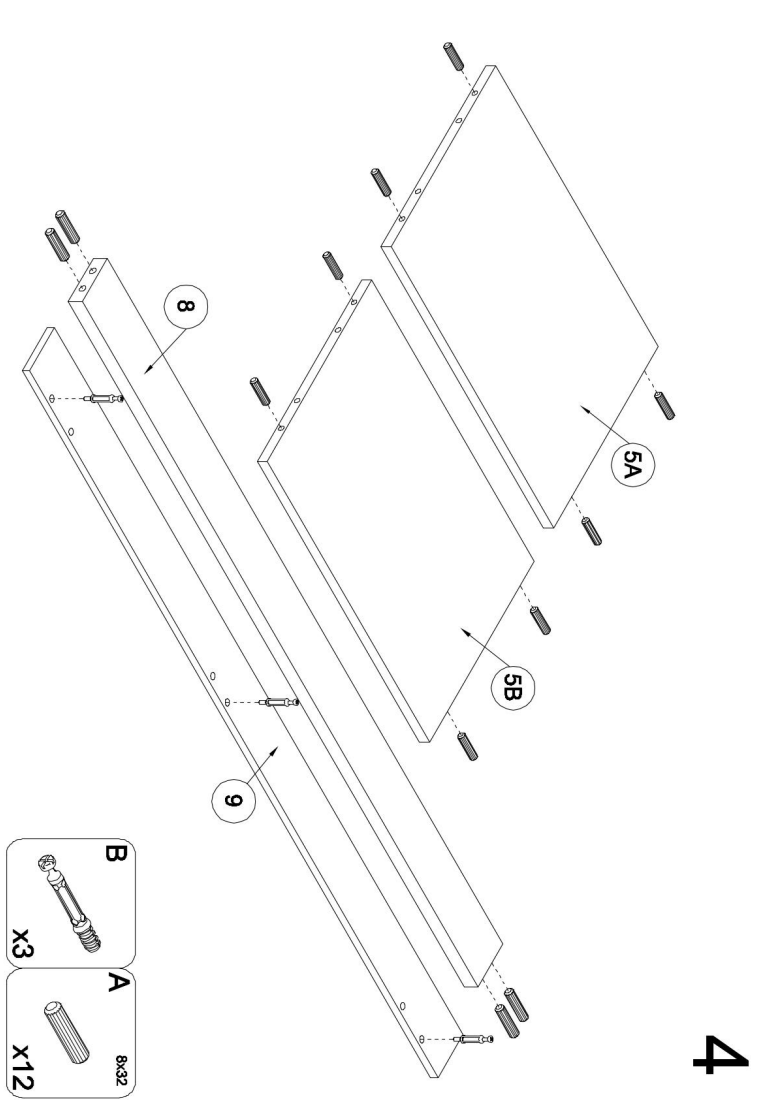



4






5

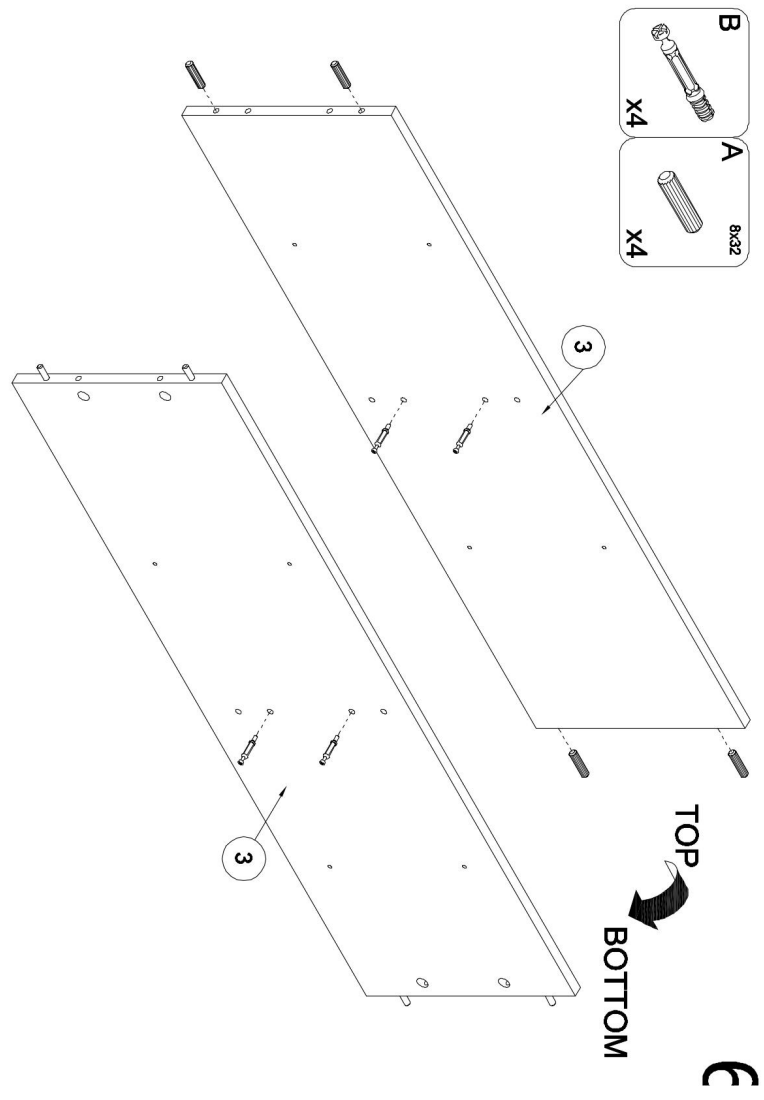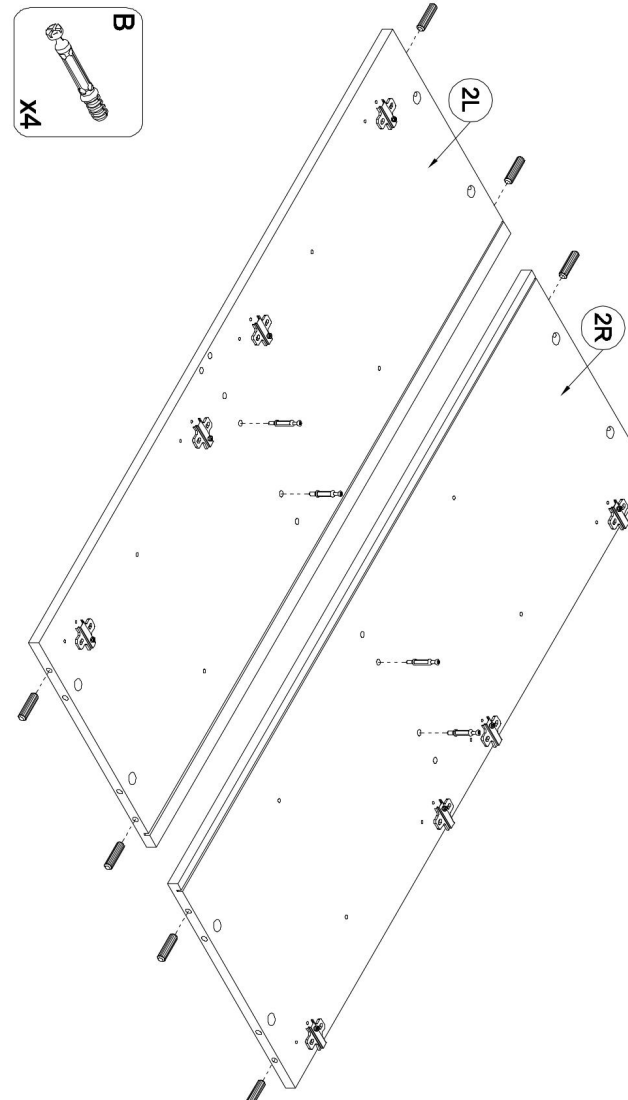




6

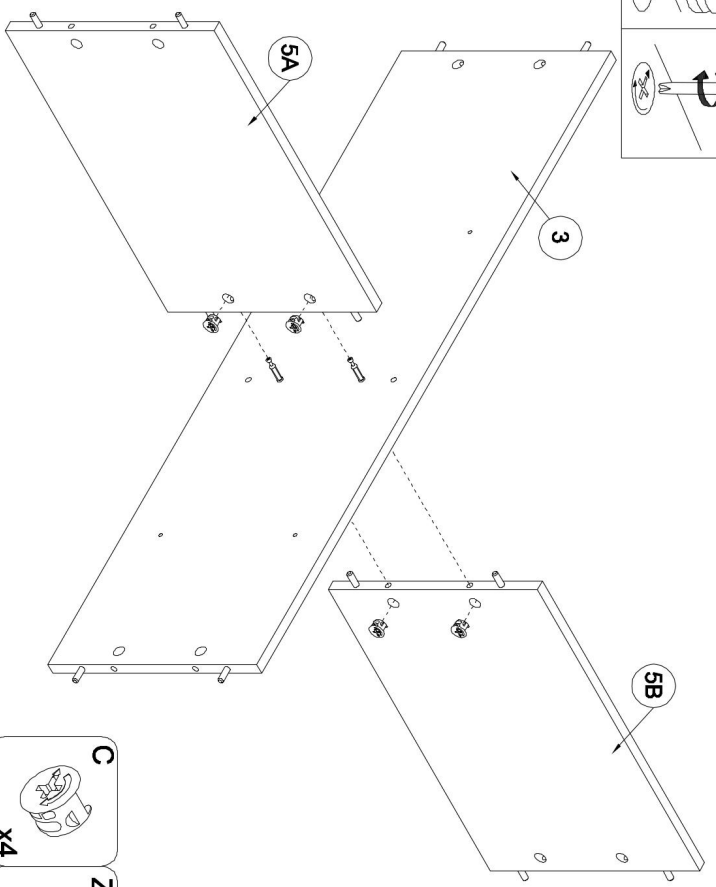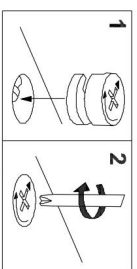




7

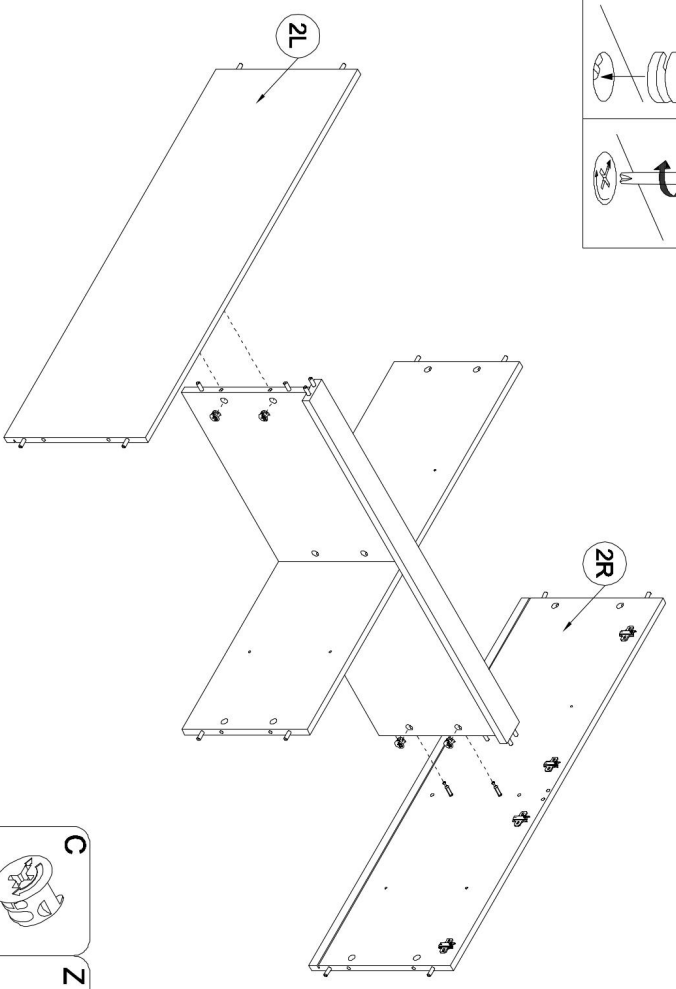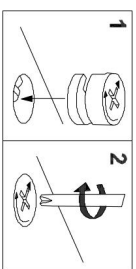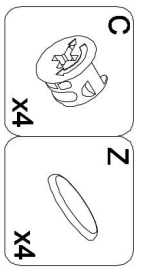


8

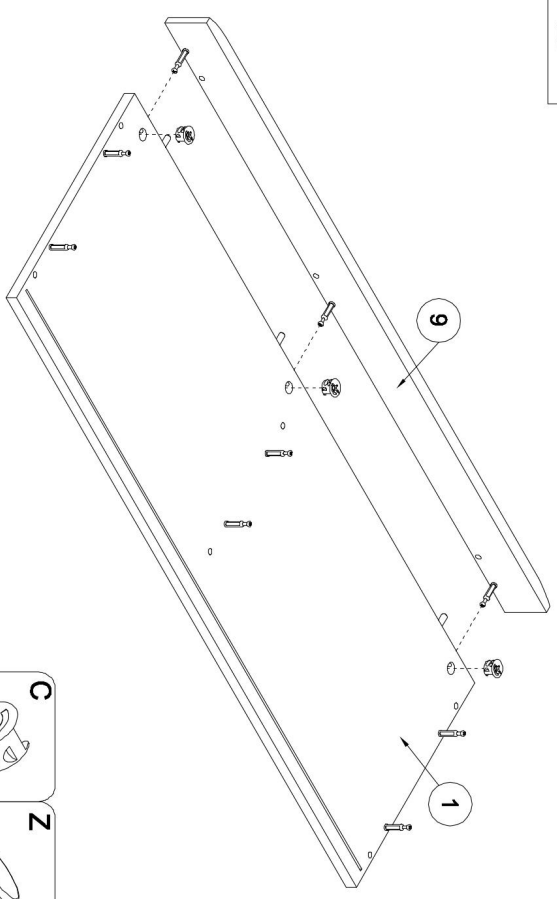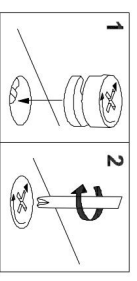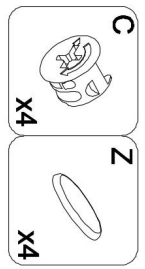


9

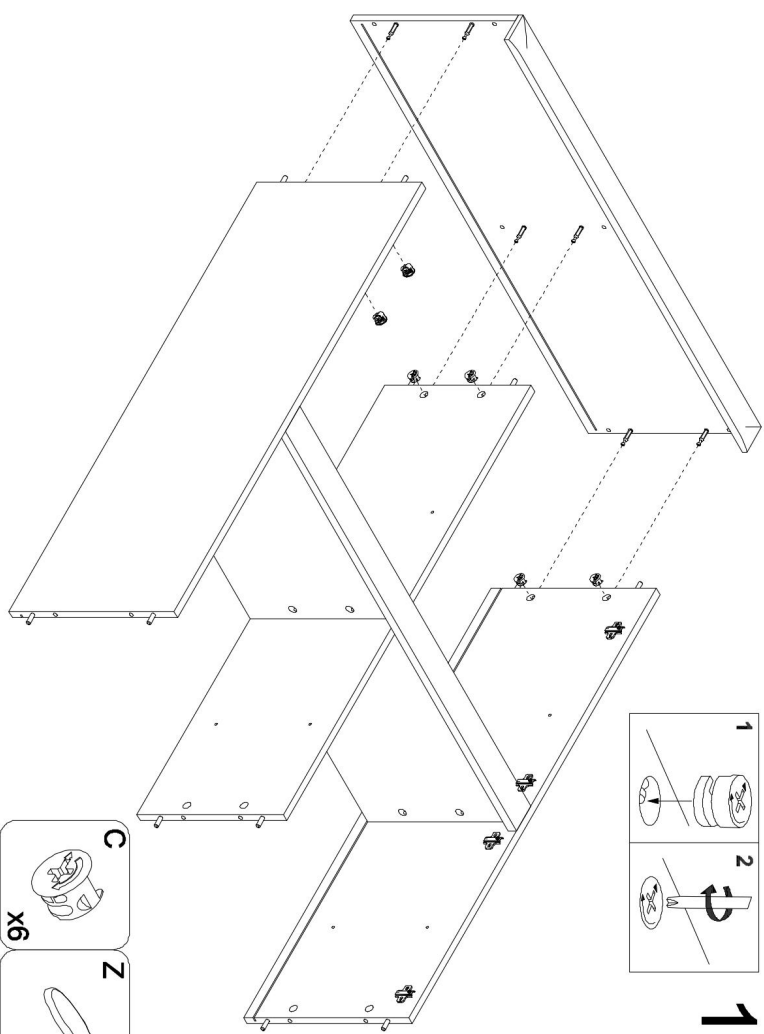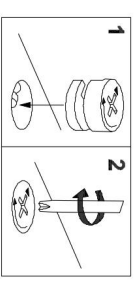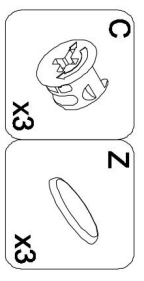


10

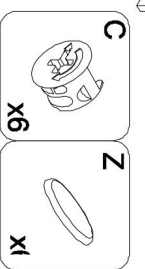


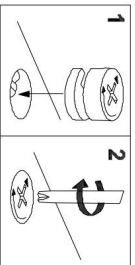


11

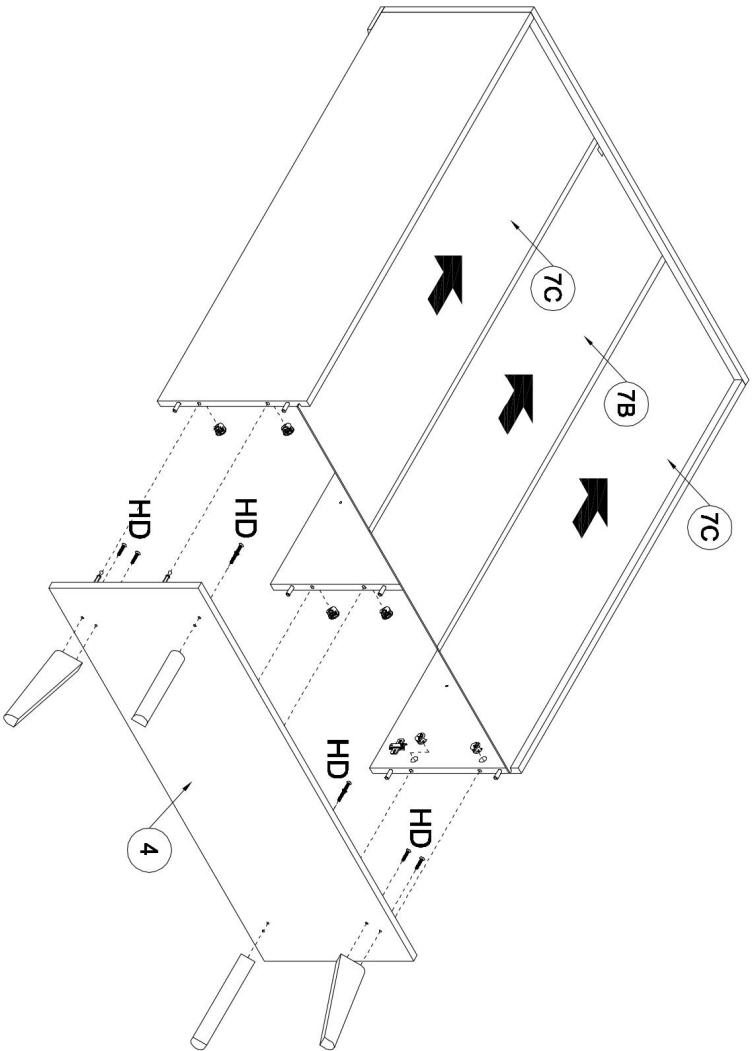


- S L-111mm x2
- HD x8
- NGD x4
- C x6
- Z x6

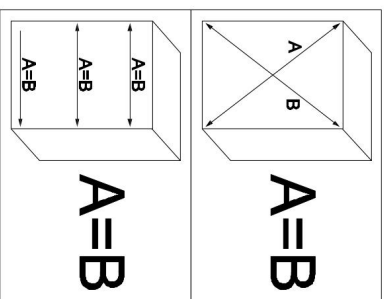







12

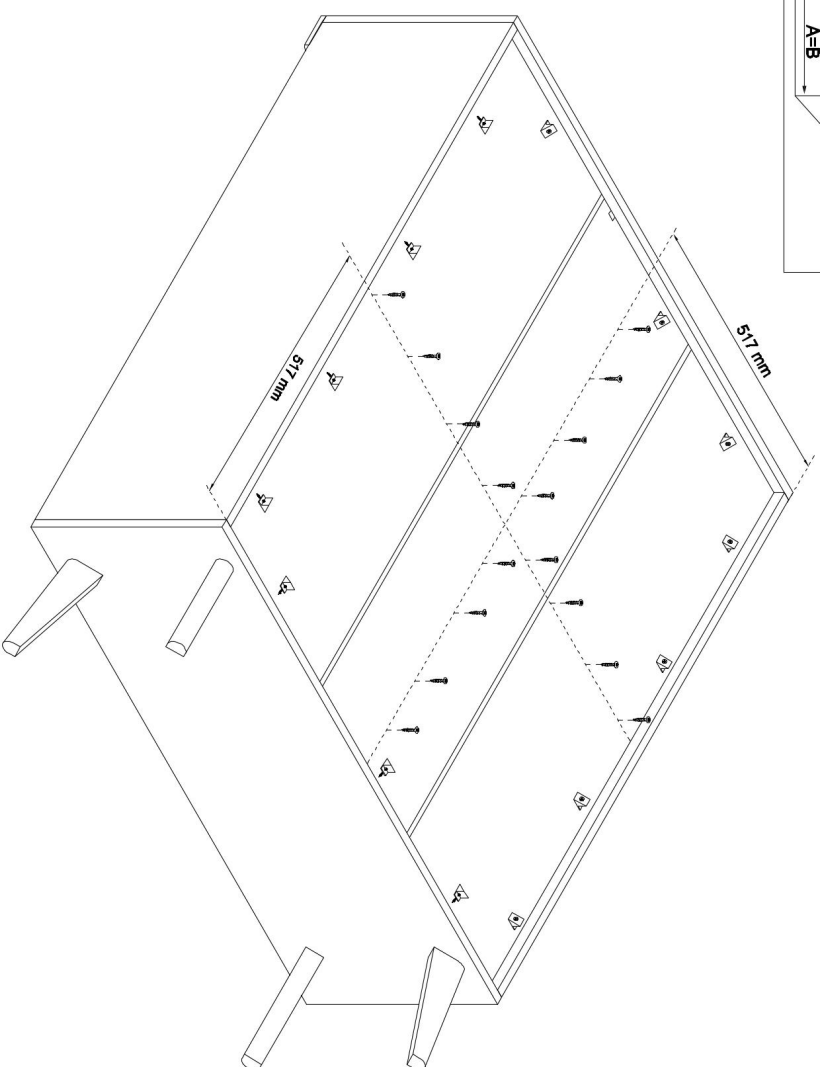



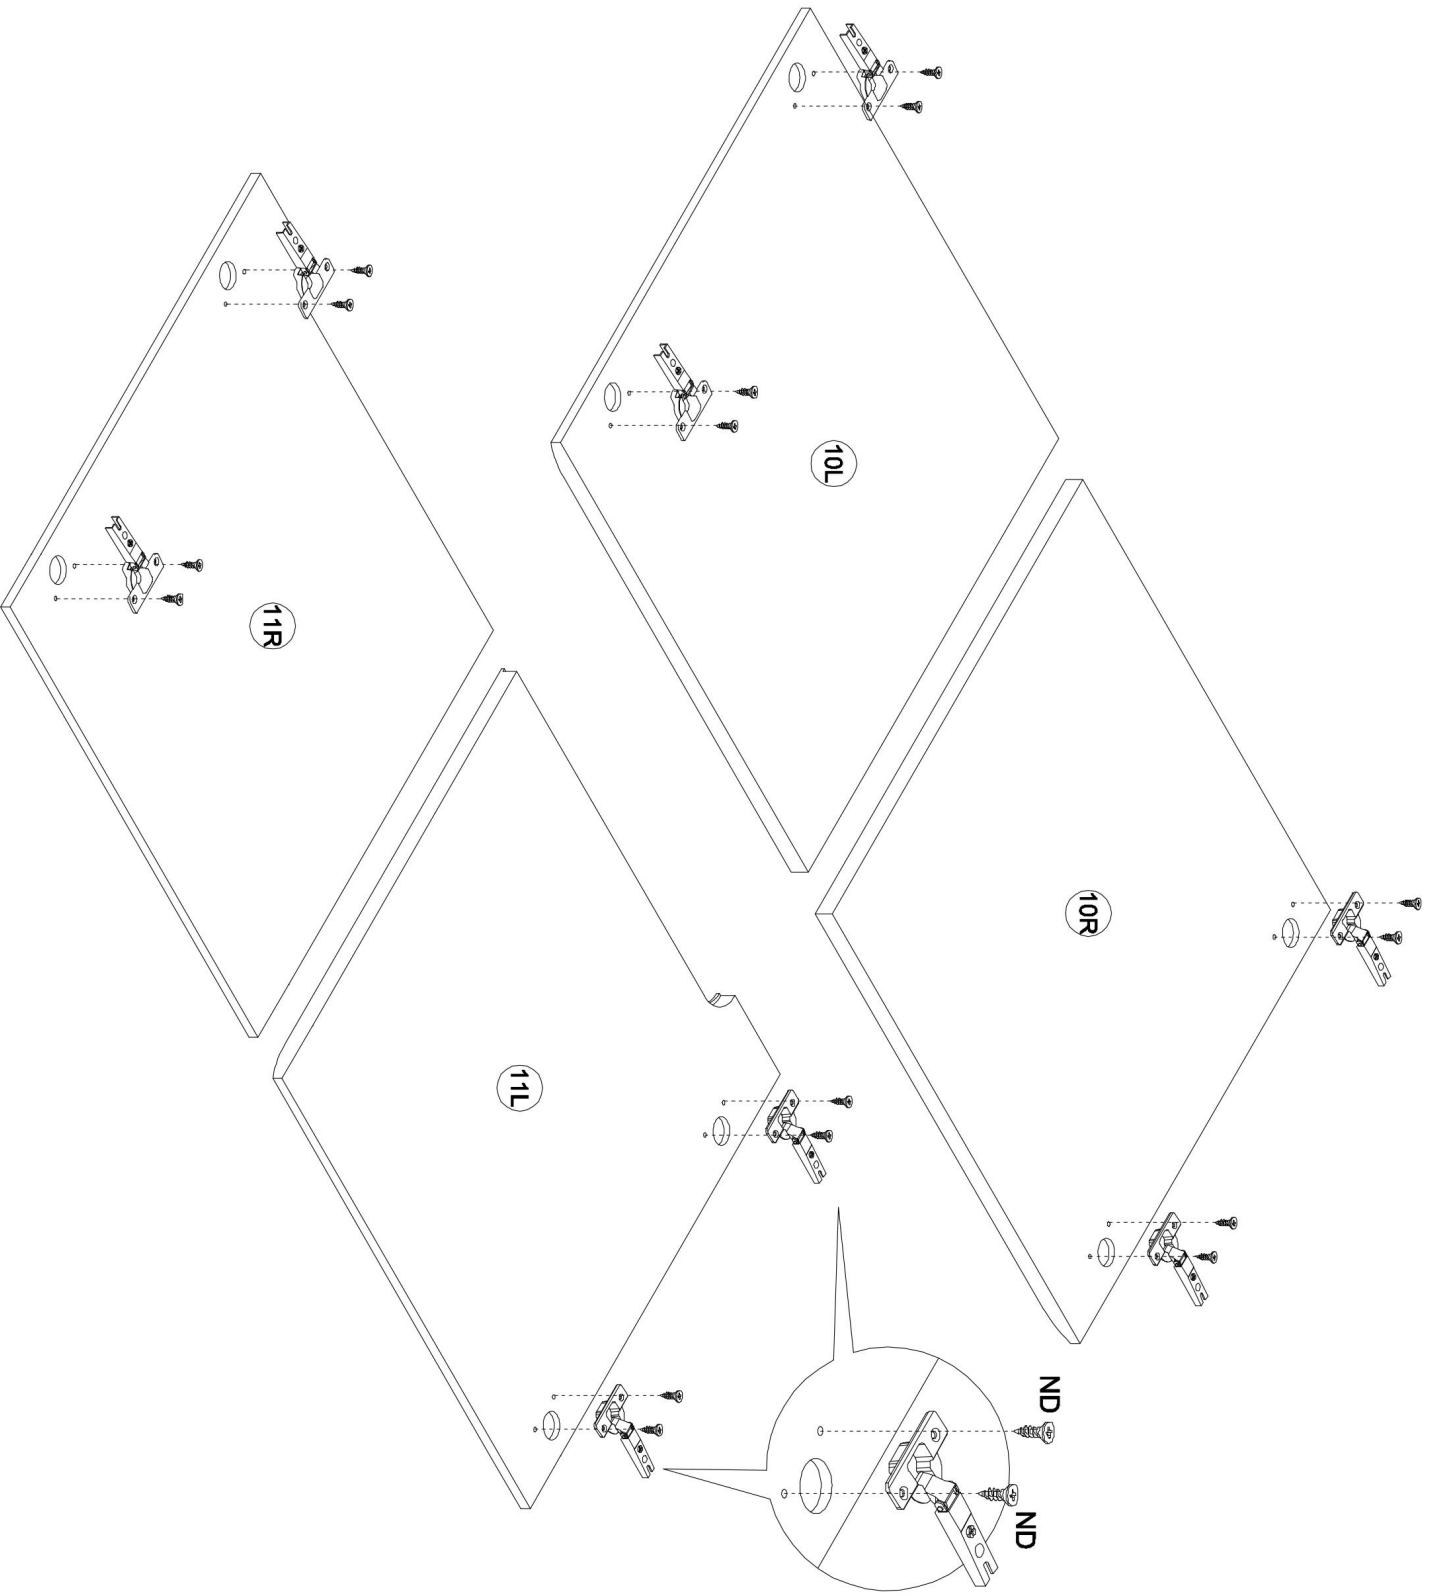

- N 3x20 x16
- X x14

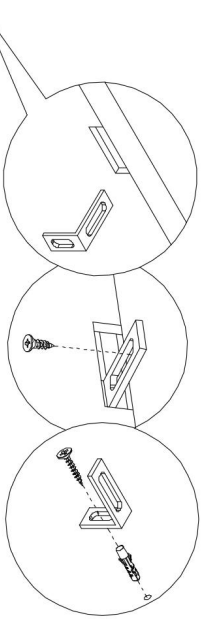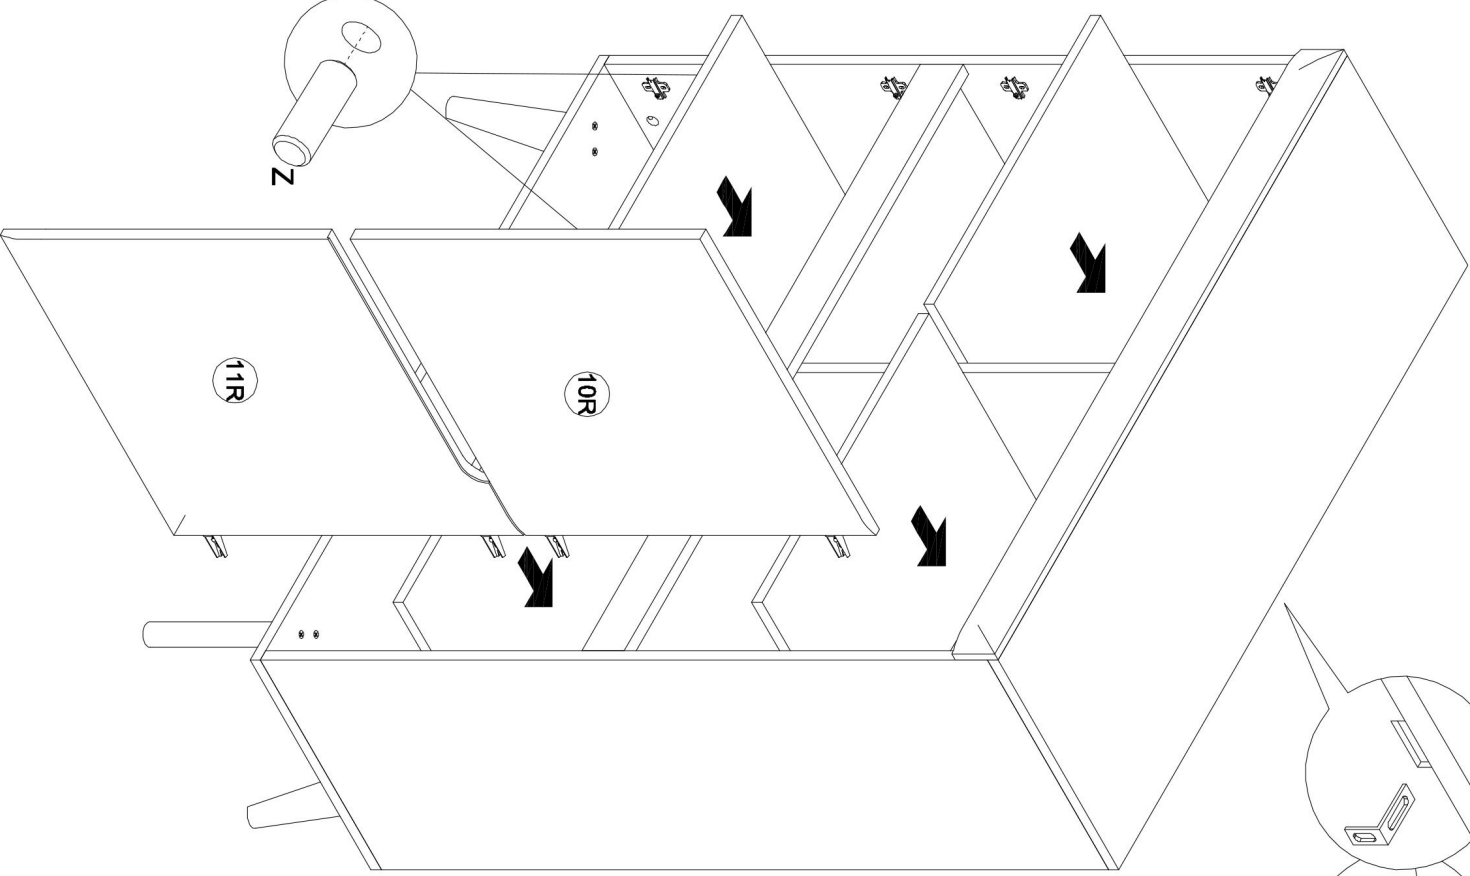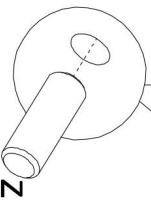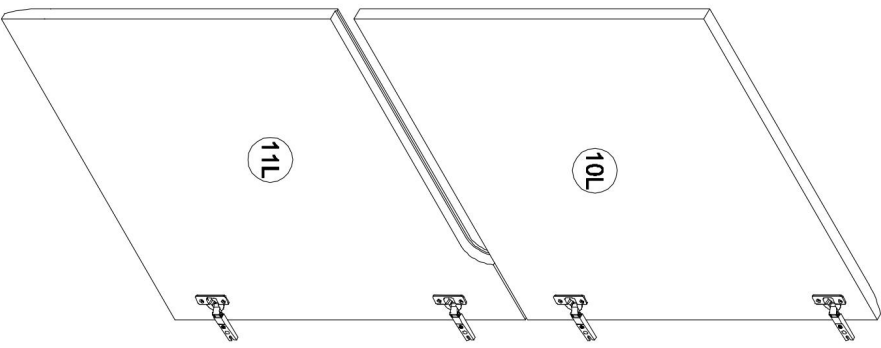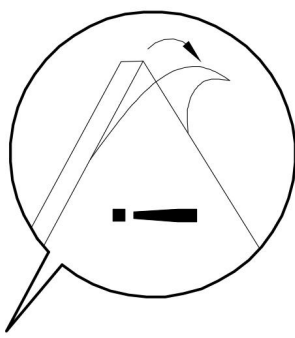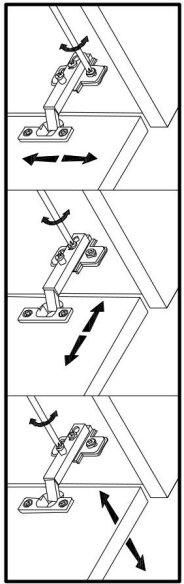

- PC x16
- ND 3.5x16 x8



- 
TB
x1
- 
TA
x1
- 
NA
4x13
x1
- 
Z
x16